










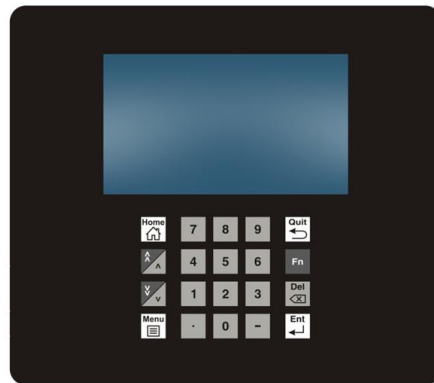



20 Key Serial Color Graphic LCD Display



Key	Name	Description
	Home Key	Jump home to the Main Display.
	Menu Key	Jump to the Dictionary Menu.
	Quit Key	Abort a revised parameter entry. Abort a test procedure. Navigate left to previous screen.
	Enter Key	Enter a revised parameter value. Navigate right to next screen.
	Single Up Arrow	Navigate up through a list.
	Single Down Arrow	Navigate down through a list.
	Double Up Arrow	Jump up one page in a list.
	Double Down Arrow	Jump down one page in a list.
	Delete Key	Backspace and/or delete a character when entering parameter values.
	Clear	Active Fault Display -- Issue a fault reset request. Clears various display items in the Help Menu